

### Testing precautions

Once the fitting is permanently connected to the mains supply, a commissioning discharge test as required in AS/NZS 2293.2 must be carried out. You will need to allow 24 hours for the battery to fully charge prior to conducting this test, presently (at the time of writing), the standard requires that fittings operate in emergency mode for a period not less than 2 hours for their commissioning test and for not less than 90 minutes thereafter (it is required that 6 monthly discharge tests be carried out). You will need to keep the records for the commissioning test and enter them into the building emergency services logbook or via other recording methods as allowed by AS/NZS 2293.2.

### Construction sites

Continuously switching off the mains power supply that is connected to emergency light fittings during the construction phase of an installation will cause these fittings to discharge and charge their batteries many times over a short period; this can shorten life of the battery. ABB does not recommend such practices and may not honour the warranty on batteries when they are subjected to such harsh operating conditions. Emergency light fittings are designed to be discharge tested once every 6 months as per AS/NZS 2293.2, subjecting the product to repeated discharge or charge cycles is regarded as an abuse of the fittings.

### Troubleshooting guide

If you have installed and connected the fitting as per the instructions listed earlier and it does not function correctly, use the following table as a guide to fixing the problem. Look up the type of fault in the left column and check the possible causes from the right column.

If the fitting still does not work after checking these possible causes, contact ABB customer service in Australia on 1800 60 20 20.

No.	Fault	Possible causes
1	LED light source and indicating LED not lit	AC supply not connected; <b>or</b> AC supply turned off; <b>or</b> Fitting not inserted into the base properly; <b>or</b> Test switch damaged
2	LED light source is lit but indicating LED not lit	Test switch damaged; <b>or</b> Battery not connected
3	LED light source does not switch to emergency mode when the test button is pressed	Test switch damaged
4	LED light source works momentarily on emergency when the test button is pressed	Battery not yet charged (allow up to 24 hours)

### ABB Australia Pty Limited

For enquiries  
ABB contact centre: 1800 60 20 20  
E-mail: AU-ABB-Stanilite@abb.com

## INSTALLATION MANUAL

# Stanilite® Exit LED Quickfit® vandal resistant

## Standard, Nexus® LX, Nexus RF



This document covers	What's inside the box
Safety warning	Main frame
Installation instructions	Diffusers
Removal instructions	Ceiling bracket
Testing precautions	Hole plug set (6 pieces)
Troubleshooting guide	Pictograph insert pack
	Installation manual
	Warranty information

### Thank you for choosing ABB product

Please read this document thoroughly before commencing installation and retain for future reference. Contact ABB customer service in Australia on 1800 60 20 20 if you need any assistance. The installation instructions were correct at the time of print. To reflect changes in technology and Australian standards; ABB reserves the right to amend the instructions without notice. Updated document can be found on the Stanilite website.

### Safety warning

In Australia and New Zealand, only licensed electricians are permitted by law to work with 240 volt electrical installations. Do not attempt to install or connect this product unless you are a licensed electrician. Turn off and isolate the electrical supply before connecting this fitting to the building wires. Do not touch the terminals of the terminal block when the light fitting is energised. The only user-serviceable part is the battery pack. LED light source is not user-serviceable. Do not attempt to service other parts of the fitting as this will void the warranty. As the installer, it is your responsibility to ensure compliance with all relevant building and safety codes, (ie: AS/NZS 3000, AS/NZS 2293). Refer to

the applicable standards for data and mains cabling installation procedures and requirements.

### Important to note:

- This product is designed for indoor use only.

### Nexus LX (data cable system)

The Nexus range of emergency light fittings are designed to be connected together into a special communication network over a level 4 (or higher) high speed, single twisted pair data cable. The Nexus user and technical guide describes all you need to know to successfully install a Nexus project. Ask for it from your supervisor, from your employer or from your nearest ABB product supplier. The network cabling of the building must be installed as per the procedure detailed in the Nexus user and technical guide. No mains or mains carrying cables are to be connected to the data terminals or cables.

### Nexus RF (wireless system)

The Nexus RF range of light fittings are designed to communicate via a proprietary RF network, however the electrical installation of the fittings is identical to that of a standard non-monitored fitting.

## Installation instructions

**Important: A M6 torx screw driver or drive bit is required for the installation.**

1. Remove four (4) M6 x 1/2 torx pin screws that secure the side cover by using a torx pin driver. Then gently insert a small flat head screwdriver into the gap between the side cover and the main housing and lever the side cover out from the housing. See figure 2.
2. Loosen the thumb screws to remove the side diffusers. Leave the bottom diffuser on.
3. Remove the fitting from the bracket by gently inserting a small screwdriver into the slot (at 'D' in figure 3) on the front of the bracket towards the right hand end of the fitting to ease the locking tab into the fitting and away from the bracket. The fitting is then free to slide to the right along the bracket for about 50mm, at which time the slots line up and it can be lowered away from the bracket, allowing the two to separate.
4. Determine the mounting configuration and position, ie: ceiling, wall or cantilever mounting. Drill 4 x 9mm diameter mounting holes at the positions as shown in figure 1a, 1b or 1c depending on mounting configuration. All drilling locations for mounting holes are indicated on the metal housing by dimple features. Cable entry hole for wall mounting must be drilled through the polycarbonate panel and cantilever mounting is drilled to suit anywhere on the face (figure 1c), cable entry hole for ceiling mount must be drilled at the dimple at the centre of the top face, marked A as shown in figure 1a. Due to the wide variety of building construction materials, mounting screws are not provided with the fitting. Use appropriate hardware to suit the individual installation and structural support needs of the fitting. Remove the terminal block cover from the terminal block before mounting the housing to the wall or ceiling.

Ceiling mount - drill holes on the face as shown

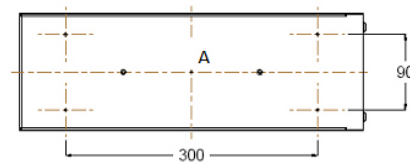


Figure 1a

Wall mount

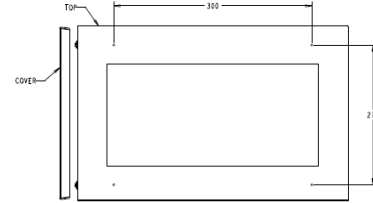


Figure 1b: Mounting holes detail as marked on surfaces

Cantilever mount

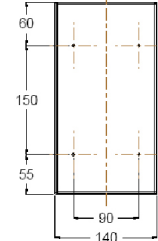


Figure 1c

5. After securing the main housing to the wall or ceiling, run the cables through the cable hole into the bracket, ensuring that the cabling is suitably protected as it passes through the cable entry holes. Strip, connect and terminate the cables as indicated in figure 2. Ensure that any double insulation of the cable/s passes into the terminal block area so that no single insulation is exposed when the cover is in place. Be careful with multi-strand conductors that all of the strands are twisted together before inserting into the terminal block. Re-install the plastic panel over the terminal block.


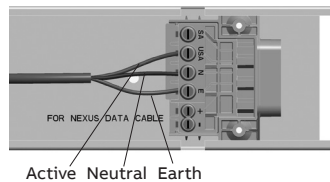


Figure 2: Mains connection and how to get access to main frame

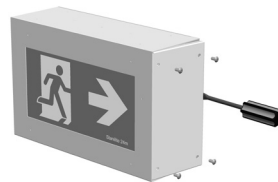

- Maintained fittings are designed for permanent illumination: connect incoming unswitched active, neutral and earth to terminal marked USA, N and E respectively.

6. For Nexus LX product; refer to data connections section.

7. Insert the side diffusers and appropriate pictograph inserts and tighten the thumbscrews by hand (inserts are fitted in between the clear polycarbonate outer panel and the opal acrylic inner panel). Attach the fitting to the mounting bracket by aligning the top left hand end of the fitting (the end without the protruding electrical connecting metal lugs) with the large cut-away slot towards the left hand end of the bracket. Slip the left hand end of the fitting up into the slot in the left hand end of the bracket (step (1) in figure 3) and hold the fitting horizontal to and parallel with the bracket. It should be approximately 50mm to the right of its final destination. Simply slide the fitting (step (2) in figure 3) 50mm to the left along and into the bracket to engage the connection and the locking tab. Once in place, the fitting cannot be removed from the bracket without the use of a tool (a small screwdriver) to push in the locking tab at 'D' in figure 3.

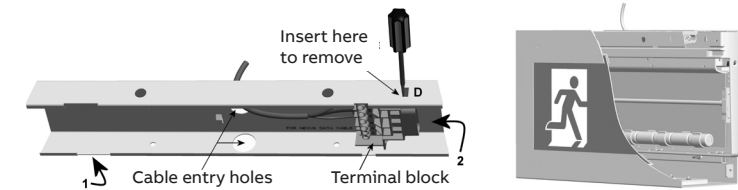


Figure 3: Frame insertion diagram

8. Once powered up, the normal AC LED lamp should energise and remain lit until the power supply fails. The emergency function of the light fitting should only operate when the normal lighting power supply fails or when somebody presses the manual test button located on the side of the fitting. Normal status of the fitting when powered, red LED indicates that the power is connected and the battery is charging or when commissioned on the Nexus LX/RF network and the fitting receives command from the Nexus LX/RF controller to switch into emergency mode. Normal initial uncommissioned status of the indicating LED on the fitting is flashing green. Once commissioned, the LED changes to a steady red and flashes red during test. Refer to the Nexus user and technical guide for a full detailed description of all possible LED states and their meanings.
9. Check operation of the fitting to ensure that the installation was successful. When powered up, allow a few minutes to give the battery a small charge, then press the manual test button located at the top right hand side edge of the fitting. Hold the test button in for a few seconds and observe the operation of the lamp switching from mains to the emergency mode. If the lamp on emergency mode works momentarily, that's okay. Try again in a few more minutes because if the battery was completely discharged, it may take a little time to charge up enough to operate even momentarily. After this time, press the test button again and if the lamp does not work at all, check the supply, the connections and the troubleshooting guide at the end of this document.
10. If the function test is successful, the end cover can be fitted. Check and adjust the gasket on the end cover, make sure it is sitting flush on the edge. Fit the end cover to the enclosure and secure it in place by four (4) M6 torx screws.

### Data connections

#### Nexus LX fitting

- The same colour wire from each data cables connects to the terminal marked +.
- The other colour wire from each of the data cables connects to the terminal marked -.
- When connected, replace the terminal block cover so that it clicks and locks into place.
- No mains or mains carrying cables are to be connected to the data terminals or cables.

**Important: 24 hours is required to allow the fitting battery to reach full capacity, ie: prior to a discharge test. As the installer, it is your responsibility to conduct the initial discharge testing of the installed fitting. Refer to AS/NZS 2293.**

### Removal instructions

1. See steps 2 and 3 in the installation instructions.